

ReelSmart™

AUTOMATIC HOSE REEL

Instructions

A. • Supplied



• Hose reel



• Spigot hose



• Drain hose


B. • Required (not included)




• Garden hose



• Nozzle

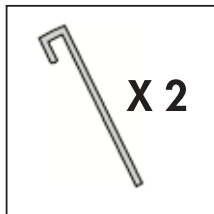


• Grass stake

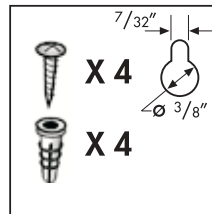

• Wall/floor screw and plug

C. • Set-up

1. Unfold drum flaps
2. Secure hose reel to wall/floor with screws & plugs (not included) or on lawn with stakes (not included); template on reverse side
3. Attach spigot hose to reel and to spigot
4. Attach drain hose to reel
5. Attach garden hose to drum

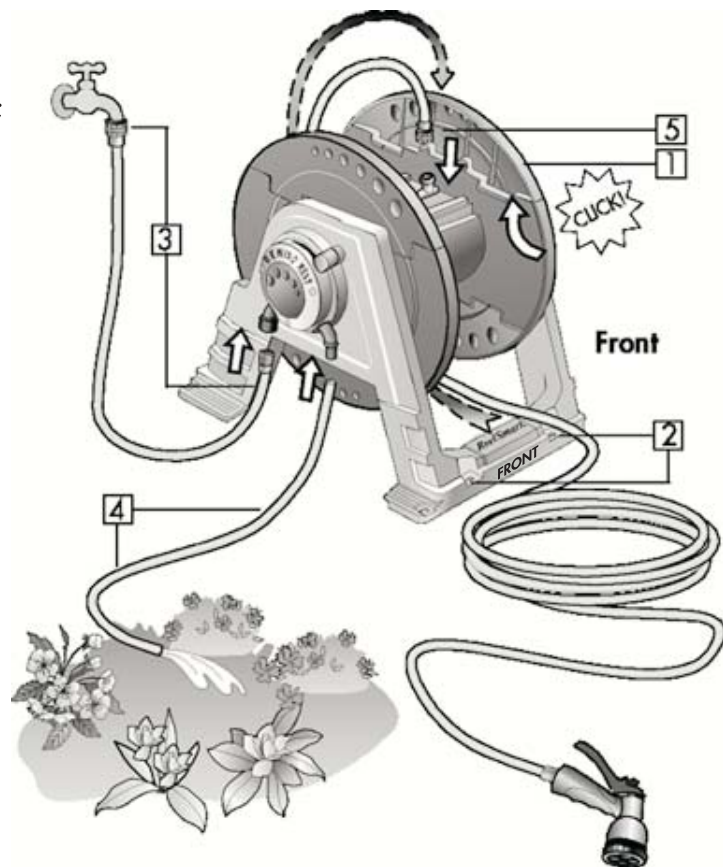


D. • Use

To Wind / Rewind


1. Open spigot
2. Push lever to "Rewind"
3. Ensure even winding on reel by guiding the hose with your hand or foot
4. Push lever to "Rest" when nozzle is 3ft. from reel
5. Close the spigot

To Water Garden

- Ensure spigot is open and lever is in "Rest" position
- Pull out required length of hose, open nozzle
- To rewind hose: Close nozzle, place on ground
Follow steps 2-5 above

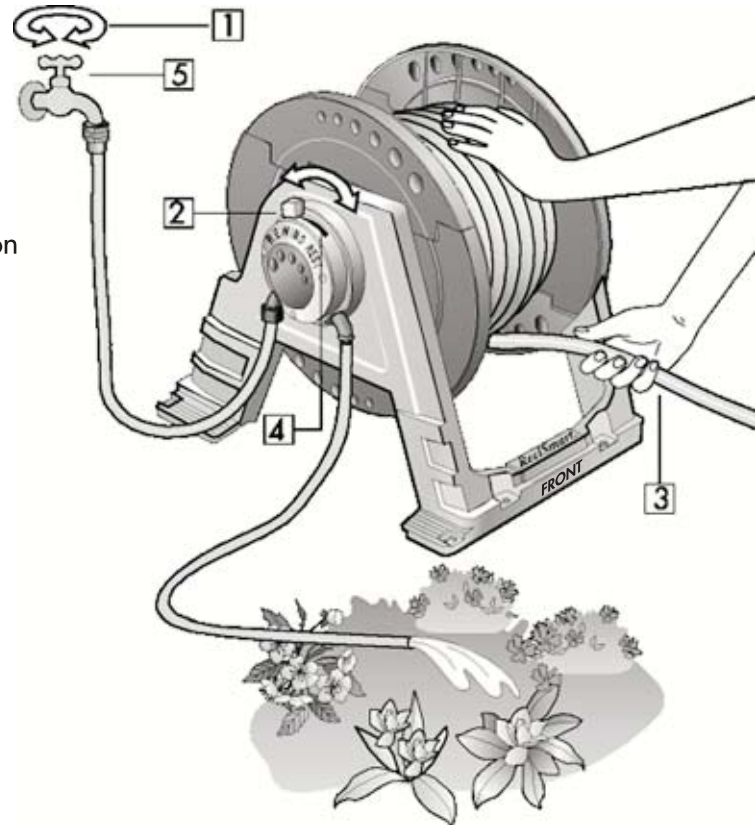

E. • Template for Wall Mounting

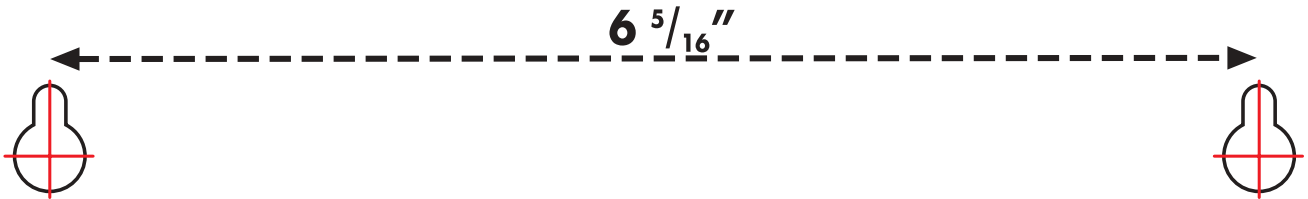

1. Mark and drill 2 holes at preferred wall height
2. Insert plugs; screw in the 2 top screws
3. Hang the hose reel
4. Mark bottom 2 holes; remove hose reel
5. Drill 2 holes; insert plugs; rehang hose reel
6. Secure the 2 bottom screws